

Cerberus™

Animated 3-Headed Dog

15.3 in. (38.86 cm)

OPERATING INSTRUCTIONS

1. Carefully remove and discard the “Try Me” wire.
2. Replace the demo batteries with 3 brand new “AA” alkaline batteries into the battery compartment located on the bottom of the item.
3. Place the switch on the bottom of Cerberus™ to the “ON” position.
4. Make a loud sound (clap) near Cerberus™ or wave hand in front of item to bring Cerberus™ to life and activate the scary sequence!

NOTE: Keep switch in the “OFF” position when not in use.

Surface washable only. ALL NEW MATERIALS: Plastic.


Requires 3 “AA” batteries (included for demo purposes only).

WARNING! This item is not a toy. For decoration only.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children 14 years of age and younger.

BATTERY INSTRUCTIONS & CAUTIONS

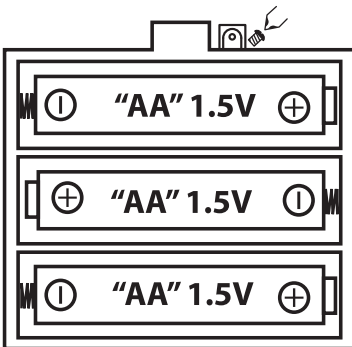

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

Item #58496. CERBERUS™ is a trademark of Tekky.
Copyright © 2019 Tekky. All Rights Reserved. MADE IN CHINA.

TekkyDesign.com